

A510 ip

Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability. This product's packaging is eco-friendly!

To learn more, visit www.gigaset.com.



GIGASET. INSPIRING CONVERSATION. MADE IN GERMANY

Safety precautions

Warning:

Be sure to read this user guide and the safety precautions on the CD before using your telephone. Explain their content and the potential hazards associated with using the telephone to your children.

- > Use only the supplied power adapters, as specified on the back of the base or charger. Use only the cables supplied for fixed line and LAN connection and connect these to the intended port only.
- > Use only the **recommended**, **rechargeable batteries**, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be damaged or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.
- > Insert rechargeable batteries with the correct polarity and use them in accordance with the user guide (polarity symbols are displayed in or on the handset battery compartment).
- > Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from.
- > Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery.
- > Do not hold the rear of the handset to your ear when it is ringing or when handsfree mode is activated. Otherwise you risk serious and permanent damage to your hearing. Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed. The handset may cause an unpleasant humming or whistling noise in hearing aids or cause them to overload. If you require assistance, please contact the hearing aid supplier.
 > Do not install the base and charger in bathrooms or shower rooms. The handset hase and charger are not
- > Do not install the base and charger in bathrooms or shower rooms. The handset, base and charger are not splashproof.
- > The charger and base are designed for use in dry rooms in a temperature range of +5°C to +45°C.
- > Do not use the phone in environments with a potential explosion hazard, e.g., paint shops.
- > Never expose the telephone to heat sources, direct sunlight or other electrical appliances.
- > Protect your Gigaset from moisture, dust, corrosive liquids and fumes.
- > If you give your Gigaset to a third party, make sure that you also give them the user guide.
- > Remove faulty bases from use or have them repaired by our Service team, as they could interfere with other wireless services.
- > All electrical and electronic products should be disposed of separately from general household waste using designated local authority sites.



If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

Correct disposal and separate collection of used equipment will help to prevent potential negative consequences for the environment and human health. They are a prerequisite for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

> Please note that only terminals that are operated in-house (inside buildings) may be connected to the analogue TAE connection.

Warning:

The device cannot be used in the event of a power failure. It is also **not** possible to transmit **emergency calls**. Furthermore, emergency numbers cannot be dialled, if the keypad lock is activated!

Package contents



- 1 Gigaset A510 IP base
- 2 Power adapter for connecting the base to the mains power supply
- 3 Phone cord (flattened) for connecting the base to the analogue fixed line network
- 4 Ethernet (LAN) cable for connecting the base to the router (LAN/Internet)
- 5 Gigaset A510H handset
- **6** Two batteries for the handset (uncharged)
- 7 Battery cover for the handset
- 8 Handset charger
- 9 Power adapter for connecting the charger to the mains power supply
- Quick user guide and CD with detailed user guide for your Gigaset.
 If the firmware for your base is updated, the user guide will also be updated and made available for download on the Internet at <u>www.gigaset.com</u>.

Keys and functions on the handset



	Display keys:	
	Start function displayed to the left or right of the	
	bottom display line.	
	Talk/Handsfree key:	
	Accept a call	
	After entering number: start dialling	
	Switch between earpiece and handsfree mode	
	(key lights up)	
ar a	Control key:	
	Mute microphone (press right)	
	Open directory (press down)	
	Open list of online directories (press down and hold)	
	Scroll through menus (press up/down)	
	Navigate in text	
(()	End call key, on/off key:	
	End call, cancel function (press briefly)	
	End call, cancel function (press briefly) Return to idle status (press and hold)	
	End call, cancel function (press briefly) Return to idle status (press and hold) Switch handset on/off (press and hold)	
1	End call, cancel function (press briefly) Return to idle status (press and hold) Switch handset on/off (press and hold) Fast access key (press and hold):	
1	End call, cancel function (press briefly) Return to idle status (press and hold) Switch handset on/off (press and hold) Fast access key (press and hold): Listen to messages on the network mailbox	
1	End call, cancel function (press briefly) Return to idle status (press and hold) Switch handset on/off (press and hold) Fast access key (press and hold): Listen to messages on the network mailbox * key: Ring tone on/off (press and hold)	
1 ∞ * • # ~	End call, cancel function (press briefly) Return to idle status (press and hold) Switch handset on/off (press and hold) Fast access key (press and hold): Listen to messages on the network mailbox * key: Ring tone on/off (press and hold) # key: Keypad lock on/off (press and hold);	
1	End call, cancel function (press briefly) Return to idle status (press and hold) Switch handset on/off (press and hold) Fast access key (press and hold): Listen to messages on the network mailbox * key: Ring tone on/off (press and hold) # key: Keypad lock on/off (press and hold); toggles between upper/lower case and digits	
1 * • # ~	End call, cancel function (press briefly) Return to idle status (press and hold) Switch handset on/off (press and hold): Fast access key (press and hold): Listen to messages on the network mailbox * key: Ring tone on/off (press and hold) # key: Keypad lock on/off (press and hold); toggles between upper/lower case and digits Message key: Open call and message lists	

Connection overview



- 1 Preparing the handset: inserting the batteries
- 2 Connecting the charger to the mains power supply and charging the batteries
- 3 Connect the phone cord and power lead to the base
- 4 Connect the base to the fixed line network and the mains power supply
- 5 Connect the base to the router in order to connect the base to the Internet (connection via router and modem or via router with integrated modem)
- 6 PC in LAN (optional) for advanced configuration of the Gigaset A510 IP base station

Preparing the handset

1

Inserting the supplied batteries and closing the battery cover



- First insert the tabs on the top of the battery cover in the recess on the housing A.
- Then press the cover until it clicks into place B.

- Check the polarity when inserting the batteries (see symbols in or on the battery compartment).
- > Use only the rechargeable batteries recommended.

Once the batteries have been inserted, the handset switches on automatically.



> The display is protected by a plastic film. Please remove the protective film!

2 Connecting the charger and charging the batteries

> Observe the sequence (A, B)!



 Place the handset in the charger and wait until the batteries are fully charged (approx.
 6.5 hours).



- > Do not put the handset back in the charger until the batteries are fully discharged through use.
- > After the first battery charge and discharge, you may place your handset in the charger after every call.
- The battery charging status is displayed in the idle display: Termination (empty to full).

Connecting the base

3 Connecting the phone cord and power lead to the base



- A Insert the (flattened) phone cord into the lower connection socket at the rear of the base.
- **B** Insert the power lead of the power adapter into the upper connection socket at the rear of the base.
- C Insert both cables into their respective cable recesses.

Use only the **supplied** phone cord and the supplied power adapter.

4 Connecting the base to the fixed line network and mains power supply

- A Insert the phone cord into the fixed line network connection socket.
- **B** Then insert the power adapter into the mains socket.

Keep the power adapter **plugged in at all times** for operation, as the phone does not work without a mains connection.



You can now use your phone to make calls via the fixed line network: Enter the number using the handset, and then press the talk key ④.

Connecting the base

5 Connecting the base station to the router (Internet)

Data protection notice

When the device is connected to the router, it automatically contacts the Gigaset support server to make it easier for you to configure the devices and to enable communication with the Internet services. For this purpose, every device sends the following device-specific information once every day:

- > Serial number/item number
- > MAC address
- > Private IP address for the Gigaset in the LAN/its port numbers
- > Device name
- > Software version

On the support server, this information is linked to the existing device-specific information:

- > Gigaset.net phone number
- > System-related/device-specific passwords

Further information about the Gigaset.net service data saved can be found on the Internet at: <u>www.gigaset.net/privacy-policy</u>



- A Connect one Ethernet cable plug to the LAN socket at the side of the base.
- **B** Insert the second Ethernet cable plug into a LAN socket on the router.

Use the Ethernet cable supplied.

As soon as the cable connecting the phone and router is plugged in and the router is switched on, the button lights up on the front of the base (paging button).



Connecting the base

6 Connecting the PC to the router (optional)

You can change the settings on the phone's base using a PC connected to your phone via the router.

> Connect the PC network connection to a free LAN socket on your router.

The procedure below requires that your phone is automatically assigned an IP address by the router (i.e., DHCP is enabled on router and phone).

In **exceptional cases** (e.g., if DHCP is not enabled on the router), you will have to assign a fixed IP address to the base for LAN access. You must enter this IP address on the handset before carrying out the following steps. Further information can be found in the user guide on the enclosed CD. The following handset menu can be used to make the entry:

(press right on the control key) \rightarrow **F** \rightarrow System \rightarrow Local Network \rightarrow (enter system PIN if required)

Instead of using the following procedure, you can also enter the VoIP access data and the assignment of the VoIP connection as send and receive connection using your PC (steps 7 to 12):

- > Launch the Web browser on your PC.
- Enter the URL <u>www.gigaset-config.com</u> in the address field of the web browser and press the return key.

You are connected to your base's Web configurator. To register with the Web configurator, you will need the system PIN for the phone (default setting: 0000).

A description of the Web configurator can be found in the user guide on the enclosed CD and in the Web configurator online help document.

Prerequisite for the following steps:

Before you can use VoIP to phone any other subscribers on the Internet, the fixed line network or the mobile phone network, you need a VoIP account.

- > Set up a VoIP account with a VoIP provider.
- > Have your VoIP account data you received from your VoIP provider to hand.

You will need:

> Your registration name (login ID), your password and, if applicable (provider-dependent), a user name (often this is your VoIP phone number).

Or

> Your personal auto-configuration code (activation code), if your provider supports "automatic configuration".

7 Starting the configuration process

When your handset is sufficiently charged (approx. 20 minutes after you have placed it in the charger), the message key 💌 on the handset flashes.



> Press the message key 💌 on the handset.

If "New firmware available" is shown in the display, updated firmware is already available for your phone. Press the right-hand display key Yes. The new firmware is loaded. This takes approx. 6 minutes. The message key 📧 will now flash again.

> Press the message key 💌 to start configuration.

8 Starting the IP assistant



 Press the key below Yes on the display (= right display key).



- > Press the **down** of the control key is to scroll down.
- > Press the OK display key to continue.



The configurable IP connections are shown in the following displays (IP 1 to IP 6). VoIP connections that are already configured are marked with ⊠.

- If necessary, press down on the control key is to select a connection.
- > Press the OK display key to continue.

Provided that your phone is set for auto-configuration (default setting), you will see the following display. Otherwise, for more information, see **10**.

If you have received a **registration name/password** and, if applicable, a user name:

- Press the key below No on the display screen.
- For more information, see 10.



If you have received an **auto**configuration code:

- > Press the key below Yes on the display screen.
- For more information, see 9.

If your phone cannot establish a connection to the Internet, one of the following messages is displayed: **IP address not available** or **Internet conn. not available**.

> Press the right display key OK to end the VoIP wizard and start the connection assistant (step 12).

Further information about possible error causes can be found in the user guide on the enclosed CD.

9 Entering an auto-configuration code



- > Enter your auto-configuration code using the keypad (max. 32 characters).
- Press the right-hand display key OK.
 All data required for VoIP telephony is loaded directly from the Internet to your phone.
 Following successful download, IP account is registered is shown in the display.
 Proceed as described under 12.

10

Selecting a provider and loading provider data to the base



- Select your country with the control key (ress down arrow).
- > Press the display key OK.



- Select your provider with the control key (press down arrow).
- > Press the display key OK.

The general access data for your VoIP provider will be downloaded and saved on the phone.

If your provider is not in the list, you must cancel the VoIP assistant:

- > Press and hold the end call key 🗊 to return your handset to idle status.
- > Perform the configuration and the assignment of the send and receive connection using the Web configurator. You will find more detailed information about this in the user guide on the enclosed CD.

11 Entering personal VoIP account data

- > To switch between upper and lower case and digits, press the ***** key (several times if necessary).
- > Characters entered incorrectly can be deleted using the left display key below Del.. The character to the left of the cursor is deleted.
- > You can navigate within the input field using the control key 🗊 (press right/left).



- > Using the number keys, enter the authentication name (user identification) that you received from your VoIP provider. This entry is case-sensitive.
- > Press the right display key OK.



- > Using the number keys, enter the authentication password that you received from your provider. This entry is case-sensitive.
- > Press the right display key OK.

Depending on your provider, you may be prompted to enter another name (**User Name**). Enter it as described above.

If the User Name is identical to the User ID, you only need to press the right display key OK.

Once you have entered all the VoIP data fully and correctly, the message "IP account is registered" will appear in the display after a short time. The VoIP wizard is closed.

Assigning the send/receive connection

12 Launching the connection assistant

To call other parties using the newly configured VoIP connection (e.g., **IP 1**), you must assign the connection to one or more of the registered handsets as a send connection.

Default assignment: The VoIP connection is assigned to every registered handset as a receive connection (incoming calls can be received). It is not assigned to any handset as a send connection. The following is shown in the display:



Assigning the send/receive connection

d.



- Press down on the control key a to switch to the next connection. Select either Yes or No as described above.
- > Repeat the steps for each connection.
- > Press the display key OK once you have finished configuring the settings for the handset.

The updated list of receive connections is displayed one more time for you to check. Press the display key OK to confirm the assignment.



The send connection currently set for the handset is displayed: **Phone**.

- > Press the display key OK if you do not wish to change the setting. Skip the following step.
- > To change the setting, press the display key Change.



Which connection/phone number should the handset use to make a call:

Press right on the control key repeatedly, until the required connection is displayed (in the example, IP1).



> Press the display key OK to save the settings.

The connection selected here is used as the standard send connection on this handset if you briefly press the talk key 🕢 after entering the number.

Assigning the send/receive connection

Instead of a fixed connection, you can also select **Select at each call**. Each time you make a call, you must then select the connection you wish to use.

You can go on to start the connection assistant for each additional handset registered to the base. The following is displayed in sequence for each handset:

Assign connect. to INT1?

> Perform steps **a.** to **f**. (see above) for each registered handset.

Completing the installation

After successfully configuring the settings, **Connec. assign. completed** is displayed briefly. Afterwards, the handset returns to idle status (an example of the display in idle status):



The following are displayed: Reception between the base and the handset: good to low: $\mathbf{1}^{(1)}$ $\mathbf{1}^{(1)}$ $\mathbf{1}^{(1)}$ $\mathbf{1}^{(1)}$, no reception: $\mathbf{1}^{(1)}$ Charge status of the batteries: $\mathbf{1}^{(1)}$ $\mathbf{1}^{(2)}$ $\mathbf{1}^{(2)}$ (flat to full) $\mathbf{1}^{(2)}$ Battery almost empty (less than 10 minutes talktime) $\mathbf{1}^{(2)}$ $\mathbf{1}^{(2)}$ $\mathbf{1}^{(2)}$ $\mathbf{1}^{(2)}$ (charging) INT 1: Internal name of the bandset



You can configure five additional VoIP connections (VoIP phone numbers) on your Gigaset. In the user guide on the enclosed CD, you will find detailed information about setting up, configuring new connections and operating your phone, as well as possible solutions to frequently asked questions and problems.

To ensure that you can always be reached via the Internet, the router must be permanently connected to the Internet.

Gigaset.net directory entry

Entering names in the Gigaset.net directory

Gigaset.net^{*} is a VoIP service provided by Gigaset Communications GmbH, which you can use to make **free calls** to other Gigaset VoIP users across the world.

Every Gigaset.net subscriber can create an entry with a name of their choice in the Gigaset.net online directory. Follow the steps below, if you wish to create and entry in the Gigaset.net directory for your phone **:

- > Press and **hold** the **down** arrow on the control key .
- > Press down on the control key ⊡ repeatedly until Gigaset.net is selected.
- > Press the display key OK. A connection to the Gigaset.net online directory is established.
- > Press the display key below Menu.
- > Press **down** on the control key repeatedly until **Own Details** appears in the display and then press the display key **OK**. Your Gigaset.net number is shown in the display.
- > Press the display key below Edit.

You will see the following display:



- > Using the number keys, enter the name that you would like to be listed under in the Gigaset.net directory.
- > Press the right display key OK.

If an entry already exists with this name, the message "Nickn. exists Please change!" will appear. You will be prompted to enter a name again.

* Exclusion of liability

** Data protection notice

Gigaset.net is a voluntary service provided by Gigaset Communications GmbH with no liability or guarantee for the availability of the network. This service can be terminated at any time.

The nickname is saved on a central Gigaset server and appears in the Gigaset.net directory. You can receive calls from other users of the Gigaset.net service under this nickname. **By entering your data, you agree to having your data saved.**

Making calls

Making calls

Enter a phone number using your handset's number keys.
 Please note that, even with local calls, you must always dial the area code for calls via VoIP (provider-dependent).

You have assigned the handset a fixed send connection (default assignment: fixed-line connection):

Briefly press the talk key .
 The number will be dialled via this send connection.

Or

- > Press and hold the talk key (). The list of your phone's connections is displayed (Phone, IP1, IP2, ...).
- > Select a send connection and press the display key Dial; the number will be dialled via the selected send connection.

You have assigned Sel. at each call to the handset:

- > Press the talk key 🕢. The list of your phone's connections is displayed.
- > Select a send connection and press the display key Dial; the number will be dialled via the selected send connection.

Customer Service & Assistance

Do you have any questions? As a Gigaset customer, you can find help quickly in this User Manual and in the service section of our Gigaset online portal <u>www.gigaset.com/service</u>.

In our constantly updated online service you can find:

- > Extensive information about our products
- > FAQ compilations
- > Keyword search to help find topics quickly
- > Compatibility database: Find out which base stations and handsets can be combined.
- > Product comparison: Compare the features of several products with each other.
- > Downloads for user manuals and current software updates
- > E-mail contact form for customer service

Please register your phone online right after purchase.

This enables us to provide you with even better service regarding questions or an after sales query/ issue/claim. In order to contact our customer service via email, please use the email contact form from our Gigaset online portal after selecting your home country.

Our representatives are also available on the telephone hotlines for consultation.

Australia	1300 /80 8/8
Austria	0043 1 311 3046
Bahrain	97 31 73 11 173
Belgium	0 78 15 66 79
Bosnia Herzegovina	033 276 649
Brazil	
(grandes cidades e regiões	metropolitanas -
Custo de uma ligao local)	
	0800 888 3020
(demais localidades - Grat	uito)
Bulgaria	. +359 2 9710666
(0.50 евро на минута от во	сички държави за
стационарни телефони. 3	а обаждания от
мобилни телефони може	да има други цени).
Canada	1-866 247-8758
China 0 21 400 6	70 6007 (RMB 0.11)
Croatia 01	2456 555(0,23 Kn)
Czech Republic	233 032 727
Denmark	+45 43682003
Finland	. +358 9725 19734
France+	33 (0)157 324 522
-	
Germany	01805 333 222
Der Anruf kostet Sie aus de	en deutschen Fest-
Der Anrúf kostet Sie aus de netzen 0,14 € pro Minute. /	en deutschen Fest- Anrufe aus den deut- sten höchstens 0.42
Der Anruf kostet Sie aus de netzen 0,14 € pro Minute. schen Mobilfunknetzen ko	n deutschen Fest- Anrufe aus den deut- sten höchstens 0,42
Der Anrúf kostet Sie aus de netzen 0,14 € pro Minute. / schen Mobilfunknetzen ko € pro Minute. Greece	en deutschen Fest- Anrufe aus den deut- sten höchstens 0,42
Der Anrúf kostet Sie aus de netzen 0,14 € pro Minute. / schen Mobilfunknetzen ko € pro Minute. Greece	en deutschen Fest- Anrufe aus den deut- sten höchstens 0,42 801-100.0.500 äéá ői óðáèåñü
Der Anrúf kostet Sie aus de netzen 0,14 € pro Minute. / schen Mobilfunknetzen ko € pro Minute. Greece	n deutschen Fest- Anrufe aus den deut- sten höchstens 0,42 801-100.0.500 äéá ôï óôáèåñü šeÞóåéö áðu éé(côu
Der Anrúf kostet Sie aus de netzen 0,14 € pro Minute. / schen Mobilfunknetzen ko € pro Minute. Greece	n deutschen Fest- Anrufe aus den deut- sten höchstens 0,42 801-100.0.500 äéá ôï óôáèåñü šéÞóåéò áðü ééíçôü śåéò)
Der Anrúf kostet Sie aus de netzen 0,14 € pro Minute. / schen Mobilfunknetzen ko € pro Minute. Greece	n deutschen Fest- Anrufe aus den deut- sten höchstens 0,42 801-100.0.500 äéá ôï óôáèåñü äéÞóåéò áðü ééíçôü šáéò) 2763 0203
Der Anrúf kostet Sie aus de netzen 0,14 E pro Minute. / schen Mobilfunknetzen ko E pro Minute. Greece	n deutschen Fest- Anrufe aus den deut- sten höchstens 0,42 801-100.0.500 āéá ôï óôáèåñü sēÞóáèó aðü ééíçôü óåéò) 2763 0203 2389 7285
Der Anrúf kostet Sie aus de netzen 0,14 E pro Minute. / schen Mobilfunknetzen ko E pro Minute. Greece	n deutschen Fest- Anrufe aus den deut- sten höchstens 0,42 801-100.0.500 āéá ôï óóáèåñü šēÞóåéò áðü ééíçôü šáéò) 2763 0203 2389 7285 06-1 267 2109
Der Anrúf kostet Sie aus de netzen 0,14 € pro Minute. / schen Mobilfunknetzen ko € pro Minute. Greece	n deutschen Fest- Anrufe aus den deut- sten höchstens 0,42 801-100.0.500 āéá ôï óóáèåñü žèÞóåéò áðü ééíçôü jáéò) 2763 0203 2389 7285 06-1 267 2109 Please refer to your
Der Anrúf kostet Sie aus de netzen 0,14 € pro Minute. / schen Mobilfunknetzen ko € pro Minute. (×ñÝùóç 0,0031 € ôï ëåðôü äßêôõï ôçò ÅëëÜäáò. Áéá e ßóùò éó÷ýïõí Üëëåò ÷ñåþe Hong Kong Hungary.	n deutschen Fest- Anrufe aus den deut- sten höchstens 0,42 801-100.0.500 āéá ôï óóáèåñü èèÞóåéò áðü ééíçôü źáéò) 2763 0203 2389 7285 06-1 267 2109 Please refer to your ocal warranty card
Der Anrúf kostet Sie aus de netzen 0,14 € pro Minute. / schen Mobilfunknetzen ko € pro Minute. Greece	n deutschen Fest- Anrufe aus den deut- sten höchstens 0,42 801-100.0.500 āéá ôï óóáèåñü èëþóåéò áðü ééíçôü jáéò) 2763 0203 2389 7285 06-1 267 2109 Please refer to your ocal warranty card (62-21) 5673813
Der Anrúf kostet Sie aus de netzen 0,14 € pro Minute. / schen Mobilfunknetzen ko € pro Minute. Greece	n deutschen Fest- Anrufe aus den deut- sten höchstens 0,42 801-100.0.500 āéá ôï óóáèåñü èeÞóåéò áðü ééíçôü óåéò) 2763 0203 2389 7285 06-1 267 2109 Please refer to your ocal warranty card (62-21) 5673813 (62-21) 888856000
Der Anrúf kostet Sie aus de netzen 0,14 € pro Minute. / schen Mobilfunknetzen ko € pro Minute. Greece	n deutschen Fest- Anrufe aus den deut- sten höchstens 0,42 801-100.0.500 āéá ðī óðáèðnü eëÞóáèó aðü éé(çöü óáéo) 2763 0203 2389 7285 06-1 267 2109 Please refer to your ocal warranty card 62-21) 868856000 +353 818 200 033
Der Anrúf kostet Sie aus de netzen 0,14 € pro Minute. / schen Mobilfunknetzen ko € pro Minute. Greece	n deutschen Fest- Anrufe aus den deut- sten höchstens 0,42 801-100.0.500 āéá ôï óóáèåñü séÞóáèó aðü ééíçôü óáéò) 2763 0203 2389 7285 06-1 267 2109 Please refer to your ocal warranty card (62-21) 88856000 +353 818 200 033 39)02.600.630.45
Der Anrúf kostet Sie aus de netzen 0,14 € pro Minute. / schen Mobilfunknetzen ko € pro Minute. Greece	n deutschen Fest- Anrufe aus den deut- sten höchstens 0,42 801-100.0.500 äéá őï óóáèåñü bébőáèó áðü ééíçöü óáéò) 2763 0203 2389 7285 06-1 267 2109 Please refer to your ocal warranty card (62-21) 5673813 (62-21) 88856000 +353 818 200 033 39)02.600.630.45 egato al proprio
Der Anrúf kostet Sie aus de netzen 0,14 € pro Minute. / schen Mobilfunknetzen ko € pro Minute. Greece	n deutschen Fest- Anrufe aus den deut- sten höchstens 0,42 801-100.0.500 ăéá ôï óóáèåñü ëëÞóåéò áðü ééíçôü jáéò) 2763 0203 2389 7285 06-1 267 2109 Please refer to your ocal warranty card (62-21) 5673813 (62-21) 888856000 +353 818 200 033 39)02.600.630.45 egato al proprio tore telefonico (ad
Der Anrúf kostet Sie aus de netzen 0,14 € pro Minute. / schen Mobilfunknetzen ko € pro Minute. Greece. (×ñÝùóç 0,0031 € ôï ëåðôü äßêôõï ôçò ÅëëÜäáò. Áéá / Bôùò éó÷ýiõí Üëëåò ÷ñåþı Hong Kong. Hungary. India. Indonesia Ireland Italy. (10 (il costo della chiamata, è l piano tariffario con l'opera esempio se si ha un piano	n deutschen Fest- Anrufe aus den deut- sten höchstens 0,42 801-100.0.500 äéá ői óóáèåñü äéÞóåéò áðü ééíçôü jáéò) 2763 0203 2389 7285 06-1 267 2109 Please refer to your ocal warranty card (62-21) 5673813 (62-21) 888856000 +353 818 200 033 39)02.600.630.45 egato al proprio tore telefonico (ad che prevede una

numero urbano nazionale, non ci sono costi aggiuntivi per la chiamata) Jordan.....00962 6 5625460/1/2 Kuwait.....+965-22458737/22458738 Lebanon.....+9611240259/+9611236110 Luxembourg..... +352 8002 3811 Malaysia+603-8076 9696 Malta.....+390 2360 46789 (0,10 €) Mexico ... 01800 999 4442738 (01800 999 GIGASET) (0.25 € per minuut (vast net). Voor oproepen uit het mobiele netwerk kunnen andere prijzen gelden.) New Zealand0800 780 878 Norway +47 2231 0845 (Oppstartskostnad 89 øre + 15 øre pr. minutt fra fasttelefon. For samtaler fra mobiltelefon gjelder egne priser.) Portugal.....+351 808 788 877 (custo de uma chamada local) Oatar00974 4257777 / 00974 4257844 Romania.....+40 021 204 9130 Saudi Arabia 00966 2 6500282 Ext. 209 Slovak Republic 02 59 68 22 66 (4,428 sk) Slovenija 01 5466511 South Africa +2711 46 13 181 Spain 902 103935 Sweden+46 8502 52347 Turkey.....+90 216 223 01 57 Ukraine.....+380-44-451-71-72 United Arab Emirates +97144458255/+97144458254 United Kingdom+44 84503 18190 USA 1-866 247-8758 Vietnam1900 545 41

Please have your record of purchase ready when calling. After sales service is not offered in countries where our product is not sold by authorised dealers.

Manufacturer warranty (Middle East)

On the purchase of your new Gigaset product, we guarantee that this equipment is a genuine manufacturer's product:

We guarantee this product against manufacturing defects for 1 year from the date of purchase, unless specified otherwise.

Adaptors and batteries for cordless phones carry 6 months warranty from the date of purchase.

Gigaset Communications authorized Service Centres will replace or repair, if necessary, any defective part/parts free of charge by presenting this certificate of warranty at the Service Centre mentioned overleaf.

This Certificate of warranty does not apply if the telephone has:

- 1. Been misused, mishandled, willfull damaged, neglected, damaged by lightning, improperly repaired, tested, altered improperly in any way.
- 2. A defect arising out of any failure to follow instructions either in the manual or product specification.
- 3. In case repairs are carried out of by unauthorized personnel or unauthorized source warranty will be void.
- 4. A defect arising from using non-Gigaset approved accessories or ancillary items attached to or in connection with the telephone.
- 5. If this certificate of warranty is not signed and stamped by the authorised distributor.
- 6. Any other claim resulting out of or in connection with the device shall be excluded from this warranty.

For Southern Africa:

In the event of an after-sales issue/warranty claim please refer back to your point of purchase.

Proof of purchase (receipt) has to be submitted.

Certificate of warranty (Middle East)

Date of Purchase: Invoice / Cash Memo Details:
Dealer's Name:
Product / Model:
Customer's Name:
Please fill in the following details and stamp the card to validate the warranty. All details must be filled in by the dealer and retained by the customer. This warranty shall apply to products purchased in the Middle East only.
The warranty is not valid if it is not signed and stamped by the authorized distributor.
Certificate of warranty (Middle East)

Dealer's Stamp

Service Centres (Midde East)

UAE

Customer Service Hotline UAE

TEL: 00971-4-4458255 / 00971-4-4458254

Service Collection Point

www.technocare-prodigy.com

KARAMA

Sea Shell Electronics Opp. Karama Centre Dubai, UAE Tel: 00971-4-3979228 Fax: 00971-4-3966205

Deira

Souvenier Mobiles, Omar Bin Katab Road, Oppst. Gulf Peral hotel (Tahir Hotel) Al Baraha Street, Tel: 00971-4-2731910 / 00971-4-2737377

Sharajah

Hotline Telecom Sahara Centre Sharjah, UAE Tel: 00971-6-5312126

Al Ain

Phone Station Al Ain Mall, Town Centre, Tel: 00971-3-7515588

Fujairah

Al Manzil, Al Gurfa Street, Main market Road, Tel: 00971-9-2233488

Oman

National Telephone Services Co. LLC P.O. Box 2786 PC:112, Sultanate of Oman Tel: +968-709281 Ext. 45/21/75 Fax: +968-791013 E-mail: isonts@omentel.net.om

Service Centres (Midde East)

Qatar

Modern Home, 51-East - Salwa Road, Al-Maha Complex, Doha Tel: 00974-4257844 / 00974-4257777 Fax: 00974-4314700

Bahrain

Authorized Service Center, Bldg: 211, Rd: 339, Block: 321, Old Place Road, Manama, Tel: 00973-17311173 E-mail: servicemanager@ashrafs.com.bh

Saudi Arabian Service Centers: Ahmed Abdulwahed Trading Co.

Jeddah Service Center

Al-Amal Plaza, Hail Street, Jeddeh, Saudi Arabia, Tel: 02-6500282 Ext. 209

Riyadh Service Center

Olaya Street Riyadh, Saudi Arabia, Tel: 01-4622470 / 4623850

Khobar Service Centre

Al-Khobar Street, Al-Khobar, Saudi Arabia, Tel: 03-8944193/03-8952359

Madina Munawara

Al-Ayon Street, Tel: 00966-4-8387931

Khamis Mushyat

Al-Khalidiya St., Tel: 00966-7-2230772

Tabuk

Main Street, Tel: 00966-4-4219232

Kuwait

Customer Service Hotline Kuwait

Tel: 00965-22458737 / 00965-22458738 Al-Baptain Service Center Shop #: 247 Qibla, Block 11, Avenue 11, Souk al Kabeer, Fahad Al Salem Street, Tel: 00965-2464993

Jordan

SEDR Home & office Electronics Co - Tronicom Wasfi Al-Tal St., Building No. 80, 2nd floor, Tel: 00962-6-5625460/1/2

Lebanon

306, Jdeideh Sin el Fil Blvd, Tel: 00961-1240259 / 00961-1236110

For questions about VoIP access, please contact the respective service provider.

Authorisation

This device is intended for connection to analogue networks outside the European Economic Area (with the exception of Switzerland) depending on national type approval.

Voice over IP telephony is possible with an additional modem via the LAN interface.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/CE.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address: www.gigaset.com/docs

€ 0682

Issued by Gigaset Communications GmbH Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2013 Subject to availability. All rights reserved. **Rights of modification reserved**. www.gigaset.com

Version: 02.09.2013

